## TECH SHEET: RapidGlide instructions for customer fabricated 1/4" plate fixtures



## SECURING A 1/4" BLANK FIXTURE PLATE USING SETSCREW IN RAPIDGLIDE TUBE






Slide ¼" plate into tube slot making sure it is seated at bottom.



Tighten setscrew with full force – cone point will seat in plate for a secure mounting.

## SECURING A 1/4" FIXTURE PLATE USING BOLT IN RAPIDGLIDE TUBE

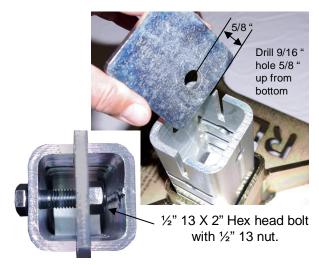



Slide  $\frac{1}{4}$ " plate into tube slot making sure it is seated at bottom and bolt holes are lined up.



Insert bolt through one side of plate and install nut – then tighten.